MANUAL





CTFPND-11

Content

Safety Precautions:
 1.1 Device
 1.2 Environment

2. Product Overview:
 2.1 Package components
 2.2 Front / Left / Right / Top / Bottom / Rear

3. Getting Started:

- 3.1 Inserting SIM card & TF card
- 3.2 Mounting the RAM and cradle
- 3.3 Locking device and Unlocking device
- 3.4 Cradle cable pin assignment
- 3.5 Turning on the device
- 3.6 Charging the device

4. Android turtorials

- 4.1 Start screen
- 4.2 Home screen
- 4.3 Status bar
- 4.4 APP screen
- 4.5 Switching between apps
- 4.6 Viewing two apps at once
- 4.7 Closing active apps
- 4.8 Turning on the device

5. Connecting to networks

- 5.1 Connecting to a Wi-Finetwork
- 5.2 Connecting to a mobile network
- 5.3 Sharing a mobile connection
- 5.4 Disconnecting from a network

6. Using the Card slots

- 6.1 Insering SIM Card
- 6.2 Removing SIM card
- 6.3 Inserting TF card
- 6.4 Removing TF card
- 7. Customer services
- 8. Specification
- 9. Safety & regulatory compliance

Safety Precautions

Device

The tablet and the battery should not be thrown into the fire and not used in areas where the temperature exceeds the specified values. This can lead to the outbreak of a fire or cause the battery to explode. In addition, this will result in a leak occurring and the functionality will be significantly reduced or the tablet cannot no longer be used. If you are charging the battery or when using the tablet, and you realize, that the temperature of the case is unusual high, because the battery has overheated, quit please the applications.

Do not charge the battery continuous for more than 24hours.

Should this precautions be disregarded, there is no guarantee.

Please charge and discharge the device as one cycle at room temperature when devices are stored for half year or above.

Do not attempt to repair, customize, or disassemble the device without the appropriate knowledge and pre-cautions may lead to dangerous situations with chance on damaging the product. Do not use in extreme conditions such as high and low temperatures, high humidity or moist environments and around magnetic fields.

Avoid long-time exposure to sunlight. Only use by the manufacturer permitted accessories to avoid damages to the product with possibly warranty loss.

Environment

The tablet is for the outdoor area designed. It is waterproof, dustproof and shockproof.

- The device can be used for up to 30minutes in 1.m deep lying water.
- You can do it in dirty and dusty environments.
- Ambient temperatures are from -10°C to 60°C possible.
- The impact resistance was with a drop height of 1.0m tested.

Package components



Front / Left / Right / Top / Bottom / Rear



Getting started Inserting SIM card & TF card



TF/SIM card

- Insert the SIM card with the gold contacts facing up.
- Insert the TF card with gold contacts facing up.
- Push the card in the direction of the arrow as shown in the figure.
- For easier removing the SIM card/TF card from the inside card slot, please assist with the SIM card/TF card tape as shown in the figure.
- SIM card/TF card cover can be locked by screws in preventing from loss or steal.

Mounting the RAM and Cradle



Locking Device & Unlocking device



Remove device from cradle

1. Insert the key, rotate the key clockwisely to unlock cradle.



2. Press and hold the release button on the cradle.



3. Separated apart between main unit and cradle.



Getting started

Cradle cable pin assignment

Interface

There are RJ45 and video input interfaces.



Turning On Device

Press Power button to turn on the device.



Getting started

Charging Device



Plug into vehicle power supply

Notice & Warning

PLEASE CHARGE AND DISCHARGE THE DEVICE AS ONE CYCLE AT ROOM TEMPERATATURE WHEN DEVICES ARE STORED FOR HALF YEAR OR ABOVE.

Start Screen



Home Screen



Android Tutorial

Status Bar

The status bar shows your tablet's status and notifications The notification panel is your center for new events:

like new e-mail, voicemail, updates, and more.

Drag down to display notifications. Touch a notification to respond.



APP Screen



Android Tutorial

Switching between home screen and app screen. Slide your fingers up from the bottom of the home screen.

Split screen:

1. Press the recent key to the right of the touch screen to display the recent applications history.

2. Press and hold the icon on top of the application you want to split screen.



3. Click Split screen.

08:04 🖪 P				١
8		Google Play Store	÷	Album
		App info		
		Split screen		
		Google Play		
	Sign in t	o find the latest Android apps, games, movies, music, & more		
		SILIN IN		
		4		

4. Select second app displayed at the same time.

23:19 🖪 P							- ¥ 8
≡ Sea			Q Searc	h apps			
For you	31	0		A			
Find your Games for you	Calendar	Camera	Chrome	Contacts	Files	Gallery	
	C	۲	9		L		
Rescue the Enchanter 4.5 * HK\$29.9	Google Go	GPS Test	Maps	Messages	Phone	Play Movies & TV	
Action-pa Play on your ta	Play Store	Settings	Sound Recorder				
ASPHALT							
Games							

- 5. When the second app appears, drag it to the left or right side of the screen.
- 6. Release the app. You can press and drag the dividing line in the center to resize the apps.



Android Tutorial

Close active Apps:

- 1. Press the recent key to the right of the touch screen
- 2. Slide your fingers up from the bottom of

the application you want to close

23:50 🖬 P		
	<u></u>	
:	Q Search settings	= 🕨
	Coster octango	🛱 Garr
_		88 App
		Mov
	Add emergency information Change wallpaper	💾 Bool
	Network & internet Wi-Fi, mobile, data usage, hotspot	
	Connected devices Bluetooth, NFC	
~		

Turning of the device:

1. Press and hold the power button for about three seconds to choose power off.



Connecting to Networks

CONNECTING TO Wi-Fi NETWORK:

- 1. Tap Settings icon to open settings menu.
- 2. In the Settings menu, tap Network & internet.
- 3. Tap the Wi-Fi toggle to enable Wi-Fi connections.
- 4. When the list of Wi-Fi networks appears, tap an available network.
- 5. Tap Connect.
- 6. Type in the password to connect to the network.

After you connect to a Wi-Fi network, the device will automatically connecting to mobile network whenever it is within range.

CONNECTING TO MOBILE NETWORK:

- 1. Insert a SIM card
- 2. In the Settings menu, tap Network & internet
- 3. Tap Mobile network
- 4. Enable Mobile data
- 5. It will show the 4G icon on the status bar if the 4G network is connected.

Sharing a mobile connection, to share a connection to a mobile network with other devices, follow these steps:

- 1. Tap settings to open setting menu.
- 2. Tap Hotspot & tethering.
- 3. Tap Wi-Fi hotspot and tap the toggle switch to turn on network sharing.
- 4. Specify the name of the network and the password.
- 5. On the other device, locate the network and enter the password to log in.

DISCONNECTING FROM A NETWORK:

- 1. Tap settings to open setting menu.
- 2. Tap Hotspot & tethering.
- 3. Tap Wi-Fi hotspot and tap the toggle switch to turn off network sharing.



Remove : SIM Card Puller helps to insert SIM Card easily.

Removing SIM card



Remove : SIM Card Puller helps to pull-out SIM Card easily.



Remove : TF Card Puller helps to insert TF Card easily.

Removing TF card



Remove : TF Card Puller helps to pull-out TF Card easily.

Model				
8″		CTFPND-11		
Hardware				
CPU		MTK platform 2GHz oct core CPU		
GPS		high sensitivity receiver, 64	channels	
4G / 3G module / GSM module		2 version (EUR and NAR) with voice call: EUR - (Europe market) • GSM : 900/1800Mhz • WCDMA - 850/900/2100Mhz • FDD (4G, EUR) - B1 , B3 , B5, B7, B8, B20 NAR- (North America market) • GSM : 850/1900MHz • WCDMA : 850/1700/1900Mhz • FDD (4G, NAR) - B2, B4, B5, B12, B17		
Bluetooth		V2.1 and V4.0 with data trar	nsfer (OPP profile)	
WLAN		Wifi IEEE 802.11 b/g/n		
Camera (back camera)		16M pixel autofocus camera and flashlight		
Camera (front	camera)	Optional but not default		
Analog video input		Default 1x 1080p AHD video input		
RFID		Yes, optional		
g-sensor		Yes, default		
Light sensor		Yes, default		
GYROSCOPE		Yes, default		
Wireless modu	le	Optional, Lora module		
Display	1	8" colour TFT touch screen (1280x800, capacitive Touch panel)		
	ROM (SLC/MLC)	32G NAND flash (dual layout for flash and eMMC)		
Memory	RAM (DDR)	2GB DDR4		
	Extend Slot	Micro SD (T Flash) card		
Antenna		Internal antenna		
LED indicator		Two-color LED (Red/Green)		
	Type C USB Connector	USB2.0 connection and pow	ver charging	
Interface	Pogo pins	Pin 1&2 – 5V Vcc Pin 3&4 – USB (D+, D-) Pin 5&6 – GND Pin 7&8 – RS232 (Tx/Rx) Pin 9 – Video input	Pin 10 - Video trigger Pin 11 – ID pin Pin 12&13 – I ² C Pin 14 – ignition Pin 15 - 9-36V input	
	SIM card slot	Yes		

	Capacity	6300mAh (default)
Battery	Standby	NA
	Operating Time	NA

Software		
Operating System	Android version 9.0	
Android applications	TBD	
Navigation software	TBD	
Packaging Details		
1pc main unit and 1pc cradle		

Customization Services

On request

Safety and Regulatory Compliance

FCC RF Exposure Information and Statement

This device meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The SAR limit of USA (FCC) is 1.6 W/kg averaged.

Device types: portable device has also been tested against this SAR limit. SAR information on this and other pad can be viewed on-line at http://www.fcc.gov/oet/ea/fccid/.

Please use the device FCC ID number for search.

This device was tested simulation typical 0mm to body.

To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above.

FCC Warning

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference

that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for

a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE

The product shall only be connected to a USB interface of version USB2.0

and that the connection to a power USB is allowed.

Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.



CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS