

# Quick Start Guide


## Product introduction

CTFPND-9 has optional features (wifi, BT, GPS, 3G, back camera, front camera, RFID, lightsensor, gyroscope, accelerometer)

Highlights:

3G – pls insert the SIM card when the device is complete off

front camera – there are 6 IR LED around the camera. if you enable the flash function in front camera, then you will see the IR LED is on. In this case, the picture will be in black and white

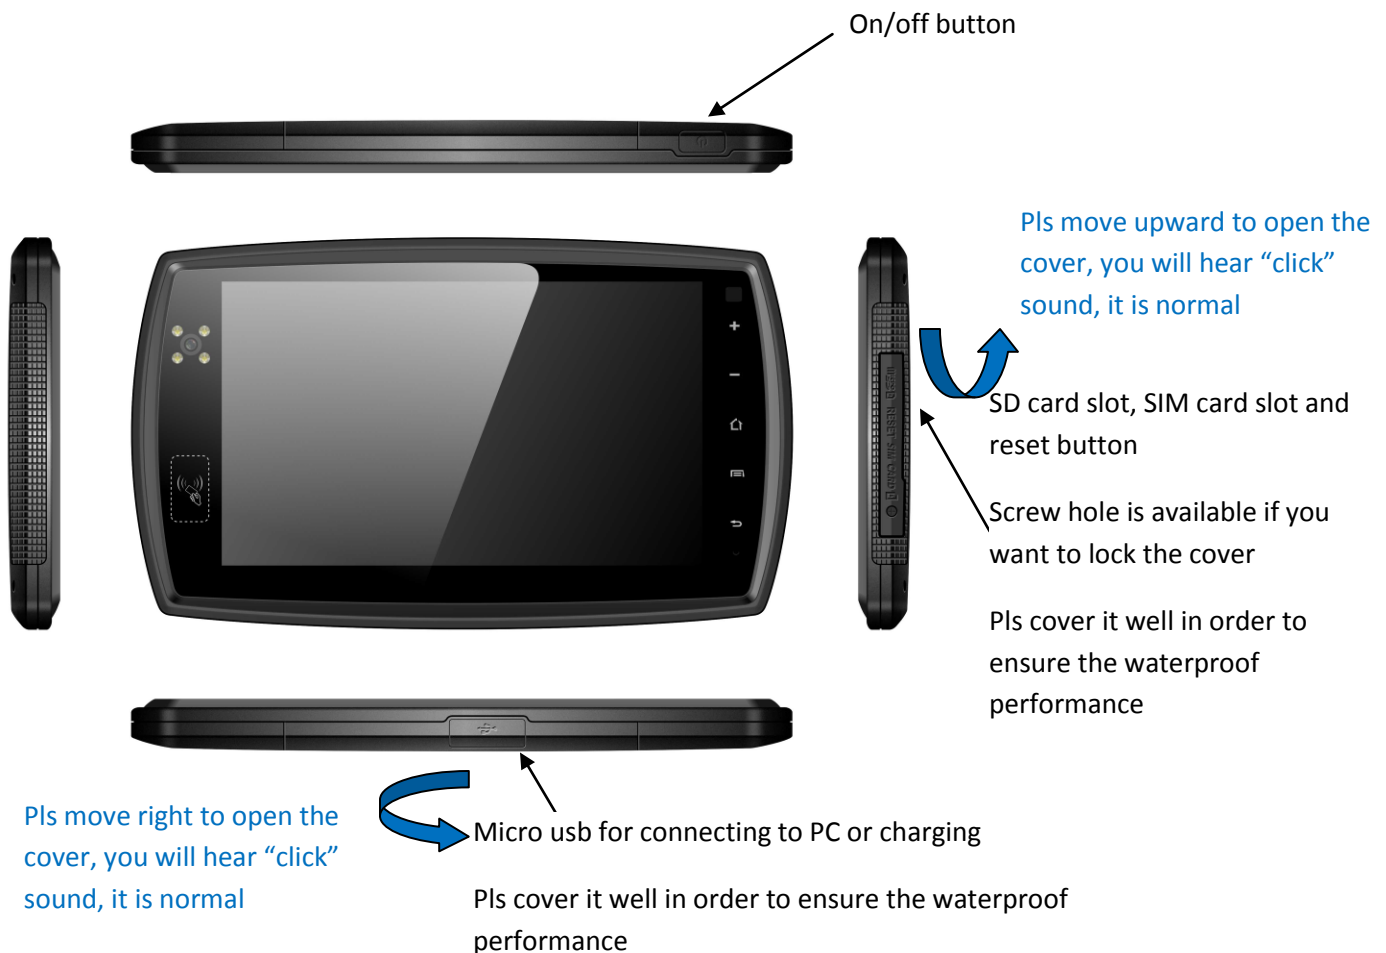


## Direction of SIM card and SD card



# Interface


1. There is TTL serial port (Tx/RX) or OTG from 10 pin usb connector

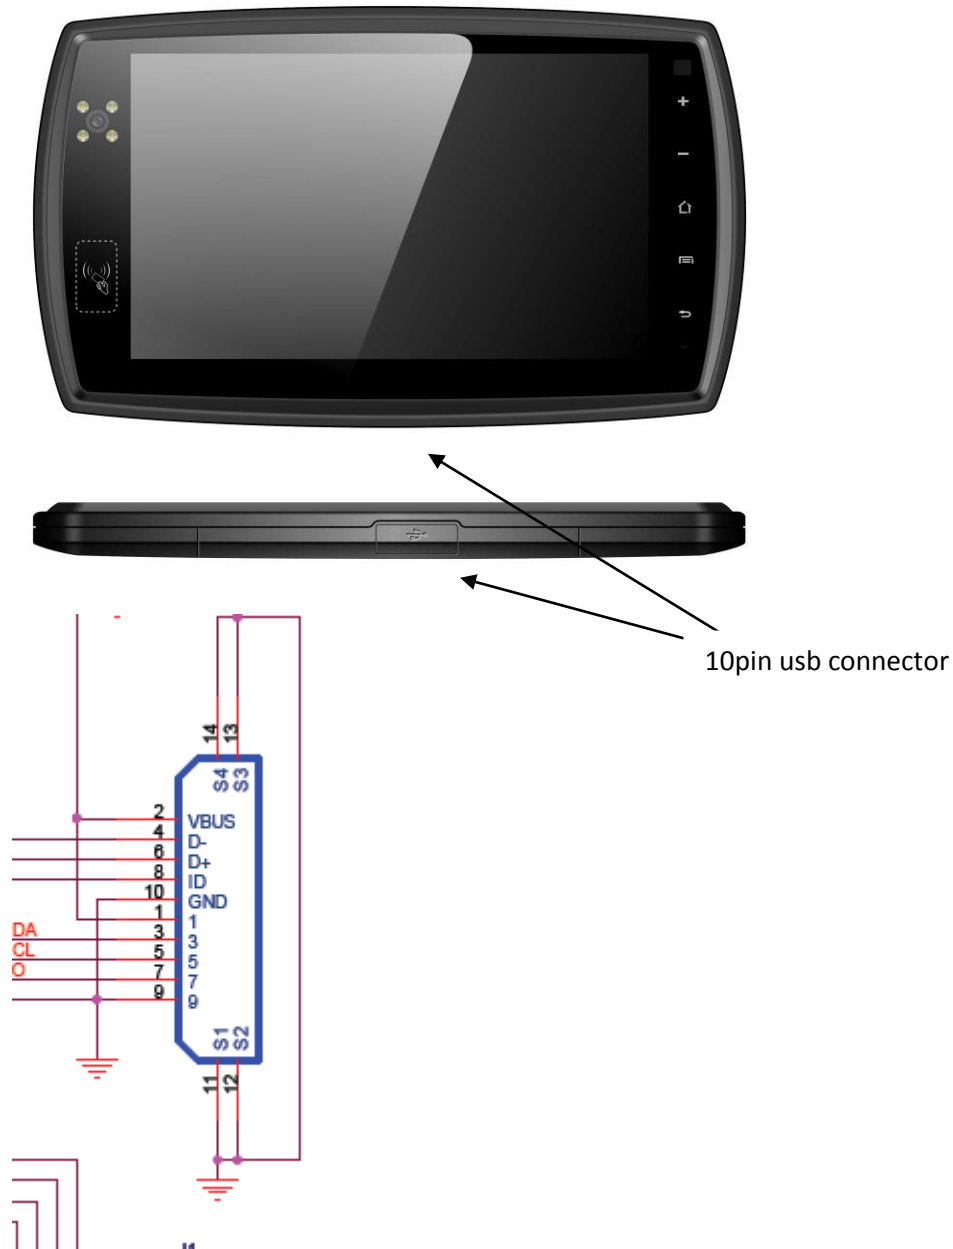

pls see the above schematics of our USB connector in our PND, it is 10 pin connector.  
Pin 4 and 6 can be used for USB or TTL serial interface (Rx/Tx) and Pin 8 is ID pin which is used to distinguish for USB or serial interface.  
if it is connected to GND, then the pin 4 and 6 will be Rx/Tx interface.  
if it is connected to Vcc, then the pin 4 and 6 will be D- and D+.

2. There are Rs232 interface and OTG from cradle.

Highlights: OTG port from device (10pin usb connector) and cradle are sharing same pins. Only 1 OTG interface can be used.

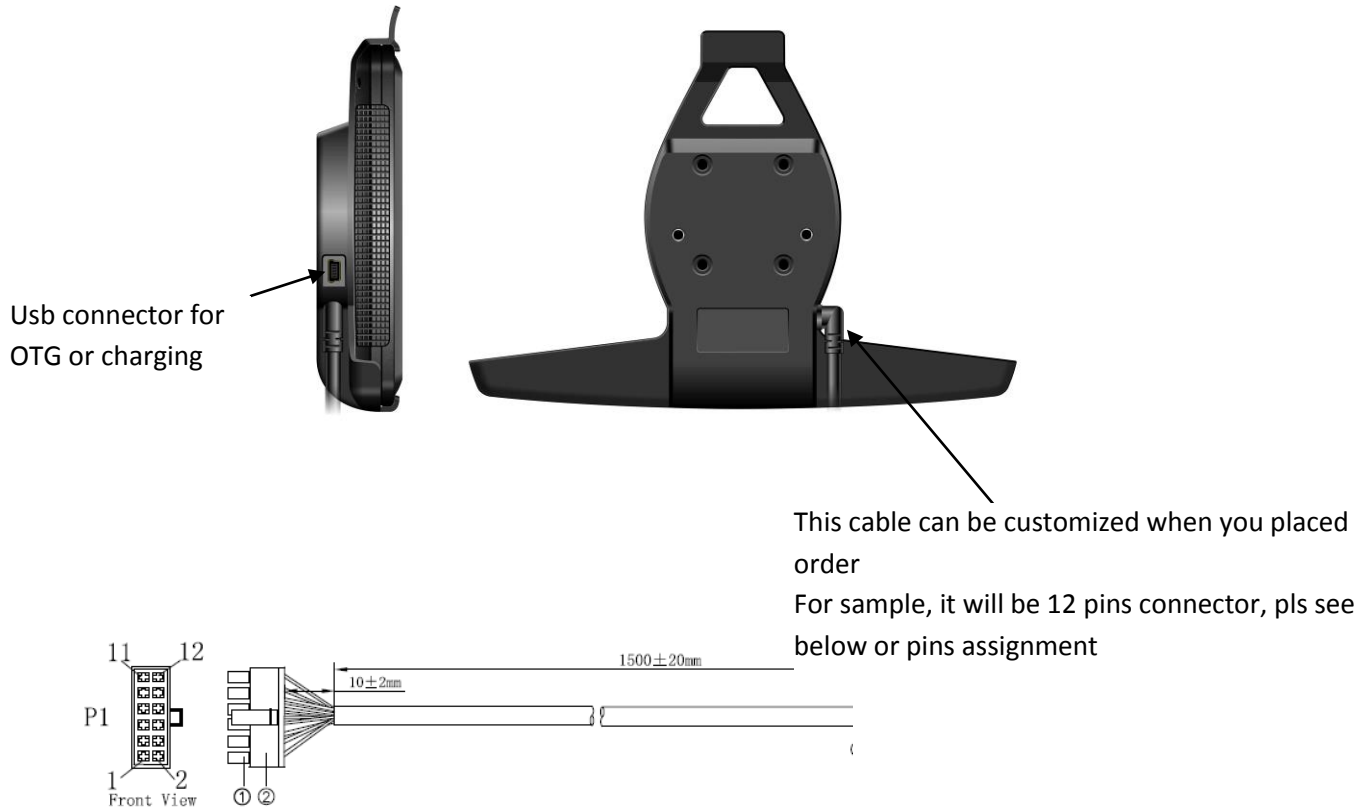

Pin 1 – Ignition (**Green**), it can be wake up the device. see the software section for more details.

Pin 2 – NOT connected

Pin 3 – RTS (**Orange**)

Pin 4 – car battery input (12-28V) (**Red**)

Pin 5 – CTS (**yellow**)

Pin 6 – TXD (**purple**)

Pin 7 – RXD (White)

Pin 8 – GND (grey)

Pin 9 – GND (black)

Pin 10 – NOT connected

Pin 11 – NOT connected

Pin 12 – 5V input (**Pink**)

Highlights: for RS232, it is master mode definition.

if you are using OTG with external device, you can only charge the device by 12V input.

## Device installation


There are few options

### 1. Directly attach mount to device (no cradle in this case)

2 screw hole at the back

Pls use M4 15mm screw if the mount thickness is 9mm.

Pls note that the screw hole depth is only 6mm. Long screw may damage the PCB inside

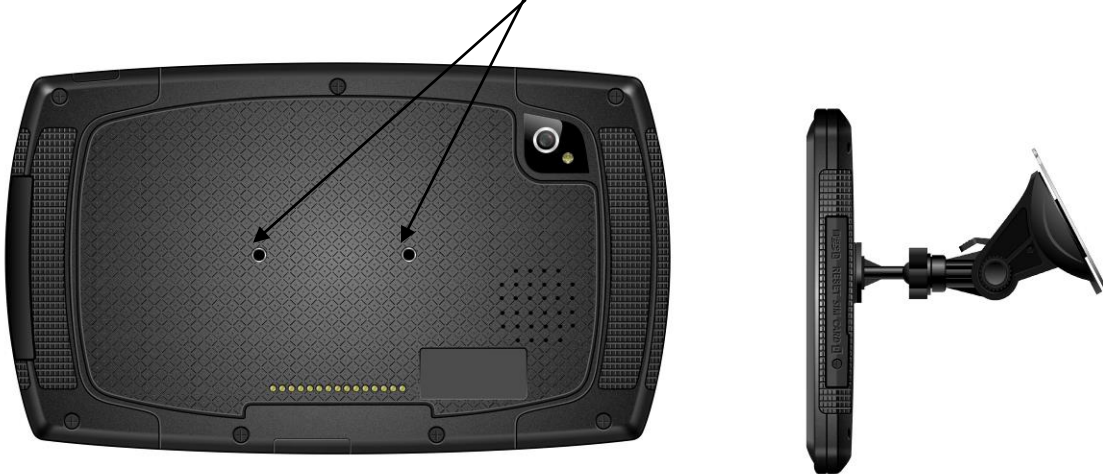


### 2. Cradle attached to car mount with different screw length

2 screw hole at the back


Case 1 – if M4 18mm screw is used, the device will be removable from cradle

Case 2 – if M4 23mm screw is used, the device will be not removable from cradle

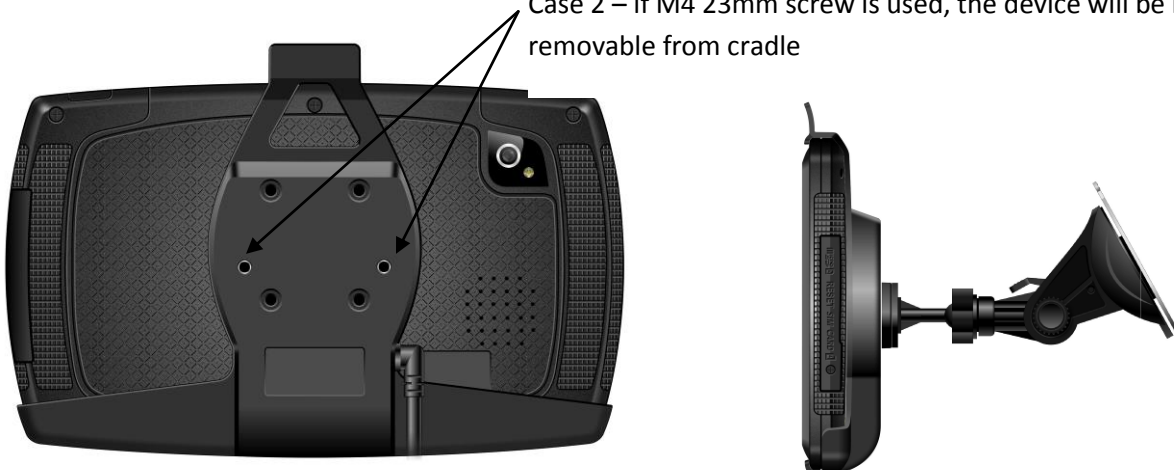

Mount options:

There are many car mount options. You can use the 2 screw hole (black colour) or 4 screw hole (yellow colour) to attach the different mount system. The 4 screw hole depth is 5mm long only, pls prepare correct screw. Pls note that wrong screw length may damage the cradle.

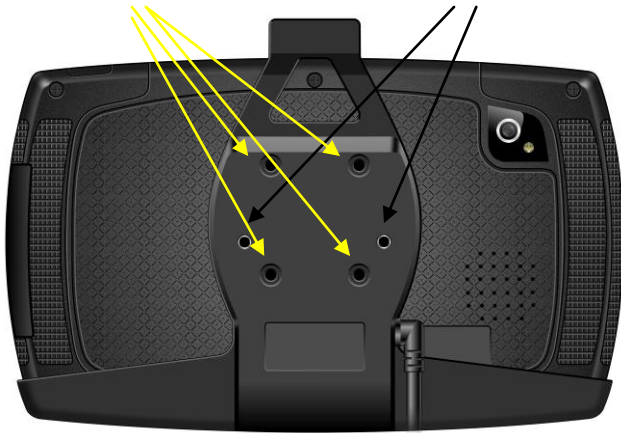

**Option 1:**

Low cost wind shield car mount




**Option 2:**

Many mount option from RAM MOUNT

You can choose the mount you like from their website ([www.rammount.com](http://www.rammount.com))

Example 1 (RAP-B-166-2U)

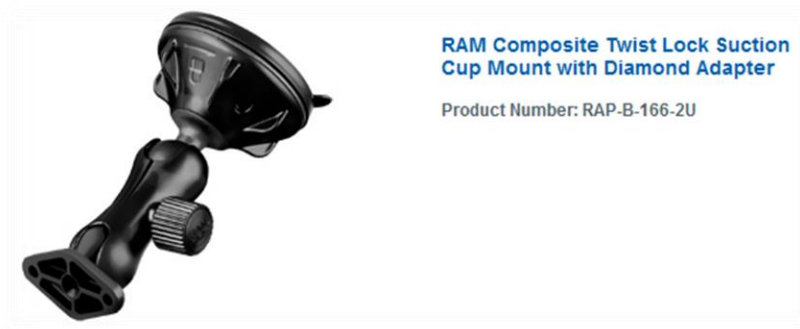

Example 2 (RAM-B-138-224-1U)



Example 3 (RAM-B-138U-A)



RAM Mount 1 Inch Diameter Ball  
Short Double Socket A Arm with 2.5  
Inch Round Base and Diamond  
Adaptor (U)

Example 4 (RAP-B-138-AU)



### **Option 3:**

You can also choose mount from HR (<http://www.hr-autocomfort.de/>)

There are 4 hole plate which you can lock in the cradle with 4 screw hole. then, you can choose the mount from HR.



Example 1 (1719/0)



### **Option 4:**

Mounting solution from truck expert (ARAT)

[http://www.arat-de.eu/index.php?ber\\_id=10&dia\\_id=1&lang=en](http://www.arat-de.eu/index.php?ber_id=10&dia_id=1&lang=en)



### **Option 5:**


There are other mount which can support this 2 screw hole and 4 screw hole at the back can be used. For my understanding, there are other mount company also use this 2 or 4 screw hole as standard. Pls let know if you need other mounting system or solution.



## New silicon sleeve

It can have more protection for the device.

1. It also support stylus. There are optional clip which you can install at the back of the sleeve.
2. There is new cradle (dock) to match the device with sleeve. This cradle can be used for the device with or without the sleeve.

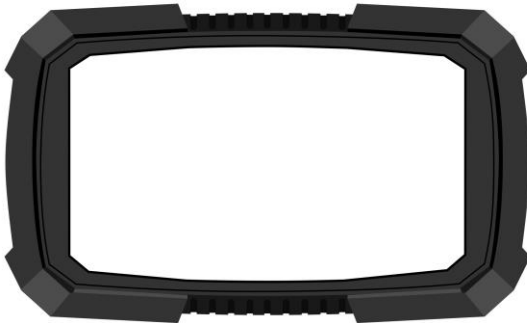

# Software support

We can provide serial port apk and NFC demo. Pls contact our Sales for details.

## 1. Pls also see the software setting for serial port

two serial ports are available on the device :

- one shares the the USB data pins of the mini A/B USB connector. Only TX and RX pins are available, voltage is TTL 3.3V.
- one is on the Pogopin interface (pins 3, 5, 6 and 7). TX, RX CTS and RTS are available, voltage is RS232.

On the software side, the tty devices corresponding to these ports are :

- for the RS232 port, /dev/user\_external\_tty
- for the TTL port, /dev/user\_tty

In addition, one I2C port is available both on the USB and Procopin connectors.

- The I2C interface is accessible through /dev/user\_i2c

## 2. if your application want to read the ignition state, pls use below API.

the 12V input is reported to the application as a key press (high level pressed, low level depressed) in the java Android API, this key is KeyEvent.KEYCODE\_TV\_INPUT

A second way to access the ignition state is to register a broadcast receiver for the action "hk.topicon.intent.action.IGNITION"

The current ignition status is given by the extra boolean "state".

This intent is sticky, ie the application will be immediately notified of the current status at registration, even if no transition occurred.

Here is a code sniplet :

```

private static final String ACTION_IGNITION = "hk.topicon.intent.action.IGNITION";

private BroadcastReceiver mIgnitionReceiver = new BroadcastReceiver() {

    public void onReceive(Context context, Intent intent) {
        String action = intent.getAction();

        if(!action.equals(ACTION_IGNITION))
            return;

        boolean state = intent.getBooleanExtra("state", false);
        if(state)
            Log.d(TAG, "ignition event is on");
        else
            Log.d(TAG, "ignition event is off");
    }
};

```